


Practical tips



It is very important to read the practical tips section in this user guide.

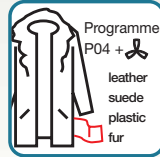

Take care with articles of clothing made of leather, suede, plastic, fur, etc. They can be treated with the Airing or deodorisation programme only.



Do not hang articles of light knitwear. They may stretch. Fold them and use the top basket.




If possible, do not overfill the washing machine. For correct drying and ironing, we recommend a spin cycle of between 700 and 900 rpm.




If possible, do not overfill the **Driron** wardrobe. Make sure the clothes are not flattened or stuck to each other.



Use the accessories correctly. Read this guide, as well as chapter III section 3 of the user manual.

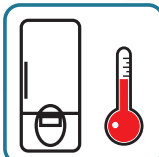

Ensure that the **Driron** is not located in an area with very high temperatures. This will increase the duration of the ironing-drying programmes. Locate the **Driron** in a cool, well-aired place.

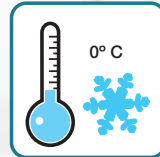

If you have installed the **Driron** outside your home, make sure it is protected from very low temperatures. Otherwise, the water inside the appliance could freeze and burst a pipe in the tank.




Do not open the door of the **Driron** when it is in operation unless it is absolutely necessary.


These are the advantages of Driron




Iron and dries all kinds of newly washed clothing Programmes P01 and P02

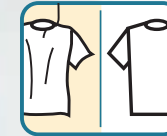

Ironing of dry clothes Programme P03

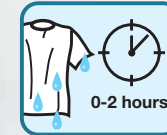

Drying damp clothes Programme P04 Complementary programme to programmes 1 and 2 for garments that are still damp. Damp clothes in general

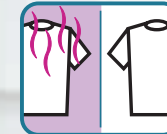


Airing of clothes and deodorisation Programme P04 +



Automatic programme end when clothes are dry



Looks after your clothes, no fluff, no wear, no fading

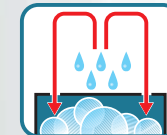

Humidity condensation system



Acts as a wardrobe for your clothes

Accessories

These accessories are resistant to humidity and heat, use them to make the most of Driron and get full satisfaction.




General tips for hanging the garments

- To hang shirts on the hangers and fit the tender clip, pull the top basket a little bit out and hang the hanger on it.
- Spread the clothes evenly inside the Driron.
- Leave the central area of the bottom hangers free.
- The top basket can be 'taken out'.
- The top hangers are removable.
- The bottom hangers are removable and fold down.

1 T-Shirt




Put the T-shirt on the hanger.

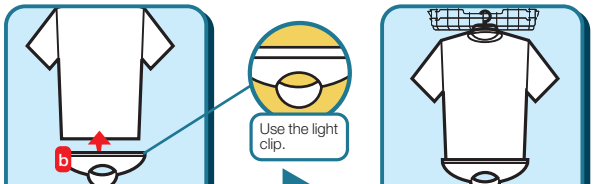


Attach the light tender clip in the middle of the T-shirt.

The T-shirt should be clipped tight and stretched along the entire width of the clip.

2 Shirt

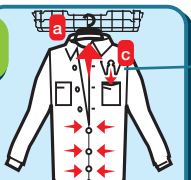

Put the shirt on the hanger and button it up.

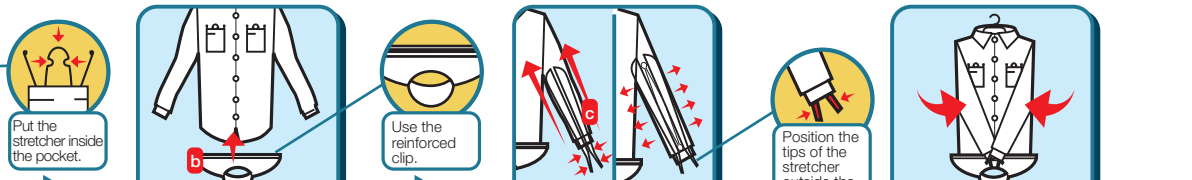


Attach the reinforced tender clip in the middle of the shirt.

Squeeze the stretcher to insert it in the sleeve, then release it.

Position the tips of the stretcher outside the sleeve.

Make sure the sleeves hang against the front of the shirt when you put it in the wardrobe.

3 Trousers

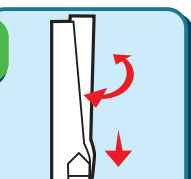

Always hang upside down.




The clips should be parallel to each other, one on each bar.


Put one trouser leg in each clip.

If the trousers have a crease, hang them up according to the crease.

4 Skirt

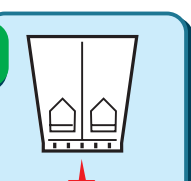

Always hang upside down.

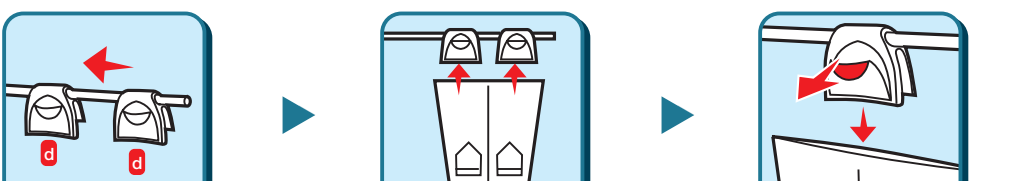


Attach both clips on the same bar.


Attach both clips near the ends of the skirt.

To release the clothing, use the handle.

5 Smalls

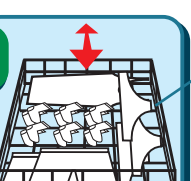

Remove the upper basket and insert the clothes laid out.

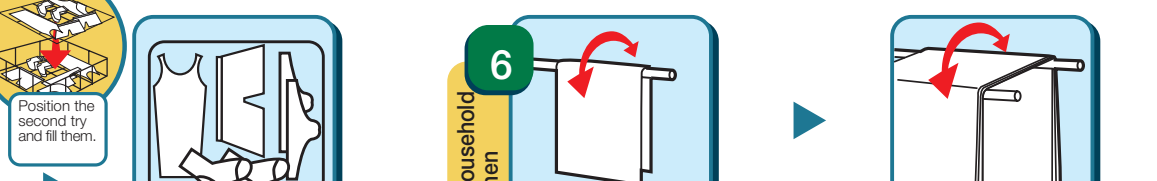


Position the second tray and fill them.

Do not pile up too many clothes, use the middle tray.

6 Household linen

Place the small-size linen directly on one of the hangers at the bottom.

Large-size linen, such as sheets and large towels. Fold and place on the two hangers at the top.

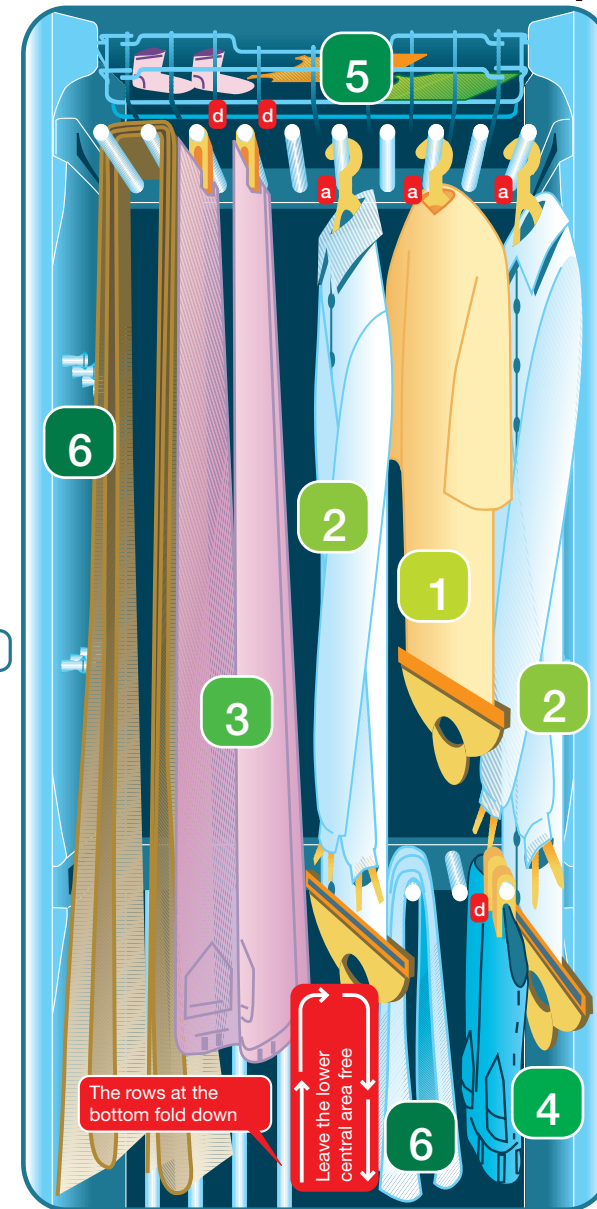

Turning it on

- If you are using a programme for the first time, read chapters 6 to 12 of the instructions manual.
- You can also consult the programme summary-diagram on the Driron. Open the door and it is located on the top of the control panel.